


ADULT SUPERVISION IS REQUIRED

Ages 8 & Up

# AIR HOGS<sup>®</sup>

## ACCELERATOR<sup>™</sup>


### INSTRUCTIONS

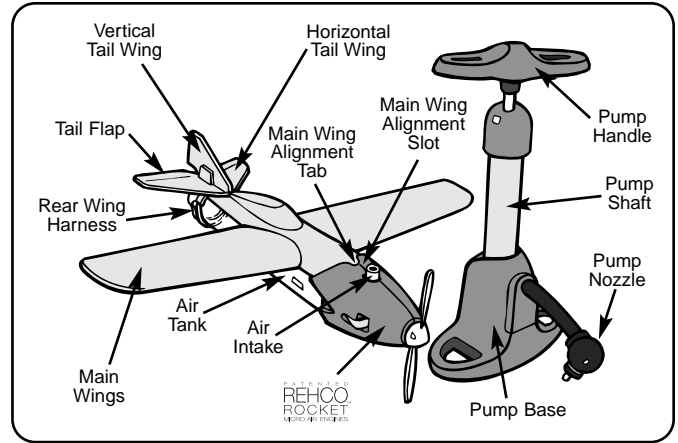

Thank you for purchasing the Air Hogs<sup>®</sup> Accelerator<sup>™</sup> and welcome to the exciting world of flight! The Accelerator<sup>™</sup> is a real-flying plane and is powered by a miniature air pressure engine, called the Rehco Rocket<sup>™</sup>. The Accelerator<sup>™</sup> reaches exciting heights of up to 50 feet. Powered by air, the Accelerator<sup>™</sup> requires no gas and no batteries... *Just Pump It Up!*

### PUMP UP YOUR ACCELERATOR<sup>™</sup>

1. Gently push the PUMP NOZZLE all the way onto the AIR INTAKE on the nose of the plane.
2. Push pump 40 times (or until the AIR TANK is full).  
TIP: You will know the AIR TANK is full when the release valve whistles.
3. Hold the plane by the engine housing and gently remove the plane from the pump.

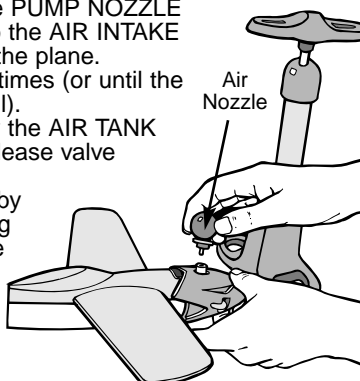


Use only the AIR PUMP that comes with your ACCELERATOR<sup>™</sup> airplane. For safety, this pump has a unique built-in pressure relief valve to ensure that the AIR TANK is not over filled.







### WING RE-ASSEMBLY

To increase the Accelerator<sup>™</sup>'s durability, it has been equipped with pop-off wings. Pop-off wings significantly help the plane to avoid breakage on impact with harsh surfaces (ie. ground, trees etc.) **IMPORTANT:** While pop-off wings do help to protect the product against damage, they are not fool-proof. To help preserve the life of your Accelerator<sup>™</sup>, always fly in a **wide open area with lots of grass.**

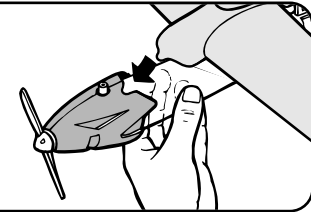1. Insert the MAIN WING ALIGNMENT TAB into the MAIN WING ALIGNMENT SLOT.
2. Strap the FRONT WING HARNESS over the front of the MAIN WING and wrap the elastic around the AIR TANK.
3. Strap the REAR WING HARNESS around the back of the AIR TANK.

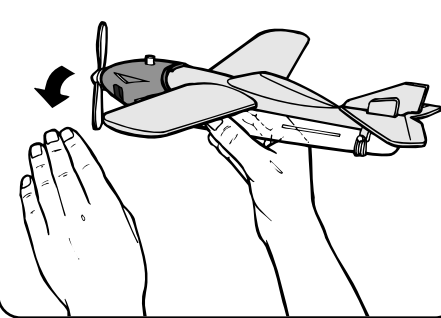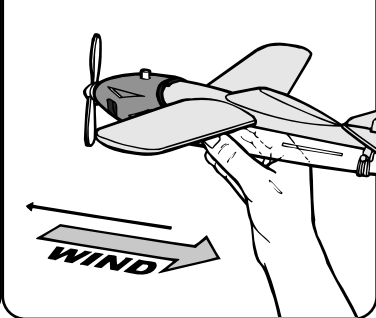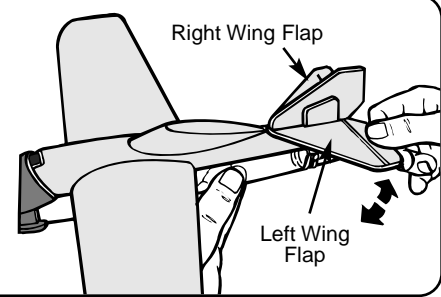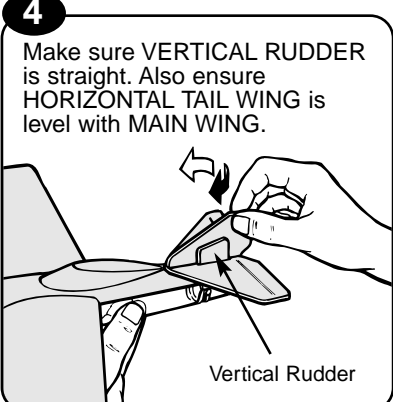

### FLIGHT INSTRUCTIONS

1. **Starting the motor**  
Hold the plane in your launching hand and flick the propeller downward with your other hand.  

2. Launch Accelerator<sup>™</sup> against the wind for best take off and flight results.  

3. To achieve a level flight you may have to adjust the right and left wing flaps up or down.
  - Gently bend the Left flap up to make the plane bank to the Left.
  - Gently bend the Right flap up to make the plane bank to the Right.
4. Make sure VERTICAL RUDDER is straight. Also ensure HORIZONTAL TAIL WING is level with MAIN WING.  

5. Bend both TAIL FLAPS up to make plane climb higher/faster.  

6. Bend both TAIL FLAPS down if plane is climbing sharply, then crashing.  


**IMPORTANT SAFETY INFORMATION – ADULT SUPERVISION IS REQUIRED**

- Keep propeller clear from face, eyes and fingers. Do not launch at people or animals.
- Pay attention. Make sure people around you know you are playing with Accelerator™. Point plane away from face when launching. Use only the pump included in this package. Other pumps may damage the plane or lead to injury. Never pump anything except air into the engine. Do not leave air in reservoir.
- Do not leave your Accelerator™ AIR TANK pressurized in direct sunlight and/or extreme heat for excessive amounts of time.
- Do not fly in very windy conditions. Do not fly plane in temperatures below 45°F/7°C or the wings will become brittle and may break, and engine performance will decrease.
- Do not fly near overhead wires, trees, buildings, or other obstructions
- After your last flight, spin the propeller to make sure all the air has been used up. Only use your Accelerator™ plane in grassy open area. To stop the propeller, gently touch the nose cone to the grass.

PROBLEM	CAUSE	SOLUTION
Engine will not start.	<ul style="list-style-type: none"> <li>• No air in AIR TANK.</li> <li>• Accelerator™ AIR INTAKE or PUMP NOZZLE are clogged with dirt.</li> </ul>	<ul style="list-style-type: none"> <li>• Pump up Accelerator™ and make sure PROPELLER is horizontal.</li> <li>• Clean out AIR INTAKE with a toothpick and re-pump.</li> </ul>
Accelerator™ does not have a level flight path.	<ul style="list-style-type: none"> <li>• TAIL WING FLAPS not adjusted properly.</li> </ul>	<ul style="list-style-type: none"> <li>• Re-adjust the TAIL WING FLAPS. FLAP UP to prevent dives and FLAP DOWN to prevent stall.</li> </ul>
Accelerator™ AIR INTAKE will not fit into PUMP NOZZLE.	<ul style="list-style-type: none"> <li>• Check for dirt in Accelerator™ AIR INTAKE or PUMP NOZZLE.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean out with a toothpick.</li> </ul>
Wings on your Accelerator™ get damaged.		<ul style="list-style-type: none"> <li>• The wings can easily be repaired with clear tape.</li> </ul>

**WARRANTY (U.S.A.)**

Spin Master Ltd. warrants to the original consumer purchaser, that this product is thoroughly tested and inspected before shipment and is guaranteed to be free of factory defects in materials and workmanship for thirty (30) days (unless specified in alternate warranties) from the date of purchase.

In the event of such a defect within the warranty period, Spin Master Ltd., at our sole option, will repair or replace the product or provide you with another product of equal value. Repair or replacement shipment is free of charge. Shipping replacement may take 2 to 6 weeks, depending on customer's location.

In the event of a defect covered under this warranty, please call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the defective part or unit, packed securely, postage prepaid and insured by the customer, to the address below. Enclose your name, address, dated sales receipt, and a brief explanation of the defect. There may be an additional handling charge if you send the entire toy.

The warranty is valid if and only if the product has been operated in accordance with the instructions. This warranty does not cover worn or defective batteries, damage resulting from neglect, unauthorized modification, accident, misuse, abuse, any action or omission which constitutes a deviation from the instructions or from the use of accessories or parts not manufactured by Spin Master Ltd. If the product is returned without a dated sales receipt the product is excluded from coverage under this warranty.

Spin Master Ltd.'s liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for accidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation) or refunds. This warranty is exclusive, and is made in lieu of any express or implied warranty. This warranty is valid only for products sold in the U.S.A. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Spin Master Ltd. reserves the right to improve the design of any product without assuming any obligation to modify any product previously manufactured.

**If you need assistance, please contact our Customer Care Centre (below) for help.**

SPIN MASTER LTD.  
 CUSTOMER CARE CENTRE  
 450 Front Street West  
 Toronto, Ontario M5V 1B6 CANADA  
 TOLL-FREE NUMBER 1-800-622-8339  
 (valid only in U.S.A.)  
 Hours: 8:00 A.M. – 5:00 P.M.  
 Eastern Time: Monday – Friday.

Air Hogs ® is a registered trademark and Accelerator™ is a trademark of Spin Master Ltd.  
 © 2003 Spin Master Ltd. All rights reserved.

Item #45133 REV 0  
 U.S. English

